

OPTION 3011

OHMS Tap Input:

- Used to measure the OHMS at the input terminal hi & lo.
- This is an active input, a reference current is used to measure The voltage across the load.



P O Box 418, Honeydew 2040 South Africa
21 Precision Street, Kyaland Randburg.
Telephone: +27 11 462-1920
Telefax: +27 11 462-1958
email: info@instrotech.co.za
web: www.instrotech.co.za

