

OPTION 3012

Peak Or Valley (Max or Min) Hold Option

- This option displays and holds the max. Or min. Value (not both) of an input signal.
- This option is activated in the programming menu “opt” by selecting whether “Hold” should be “On” or “Off”, and selecting valley (“valy” = “On”) or peak (“valy” = “Off”) mode.
- To show peak / valley value, press the “up” arrow for 3 seconds.
- To show normal display value, press the “side” arrow key for 3 seconds.
- To reset the peak / valley hold value, press the “star” key for 3 seconds, or use an external potential free contact. If analog output option is fitted, the output will hold as well.

NOTE: The update time depends on the instrument A/D update.



P O Box 418, Honeydew 2040 South Africa
21 Precision Street, Kyasand Randburg.
Telephone: +27 11 462-1920
Telefax: +27 11 462-1958
email: info@instrotech.co.za
web: www.instrotech.co.za

