

PASCOLO OPERATING GUIDE

Start Up

Press the front key. The display indicates the range and a program number (normally Cali 9542). After 3 seconds, the instrument switches to the **MANO**-Mode displaying the actual pressure and units.

When the key is operated, the following commands appear. Releasing the key when the command appears executes the command.

- OFF:** Turns off the instrument.
- MANO:** Leads back to the measuring mode.
- ZERO:** Writes a new zero into the memory.
(when **ZERO** is displayed, press key again and release it at display **EXE** --> The new zero is set).

The instrument automatically turns off after 15 minutes. This time-out can be specified on order to any time up to 4 hours and 15 minutes or specified permanently on.

When pressing the key, the two contacts (which are visible when taking off the cover) are short-circuited by the conductive plastic cover. If the cover is not properly in place, the contact might not be properly made. Move the cover back into its place.

Without a cover, the key function can be replaced as followed:


Bridge the contacts with moistened middle- and index finger.

With the cover removed, the time since turn-on and the temperature of the cell are indicated on the lower displays. The temperature is not calibrated and may deviate by 2 degrees.

Battery Change:

The battery lasts appr. 360 operating hours. If the display starts to fade, the battery has to be changed. Open the battery compartment with a coin. Insert the new battery (Type CR 2430) --> The display will indicate arbitrary numbers. Turn-off the instrument with command **OFF** and restart it.

Pascolo
with cover

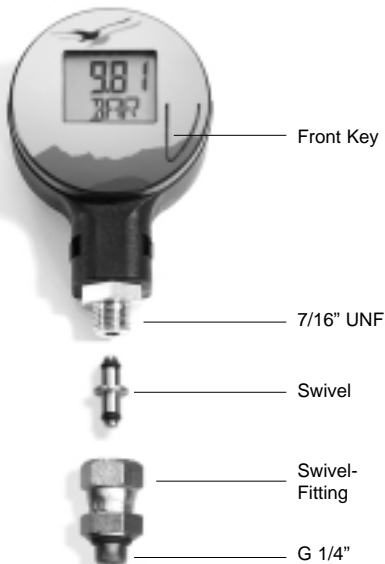

Pascolo with
cover removed

